


mypak SOLUTIONS

software consumables automation




Perforated Blister Pack

Perforated Pack Components

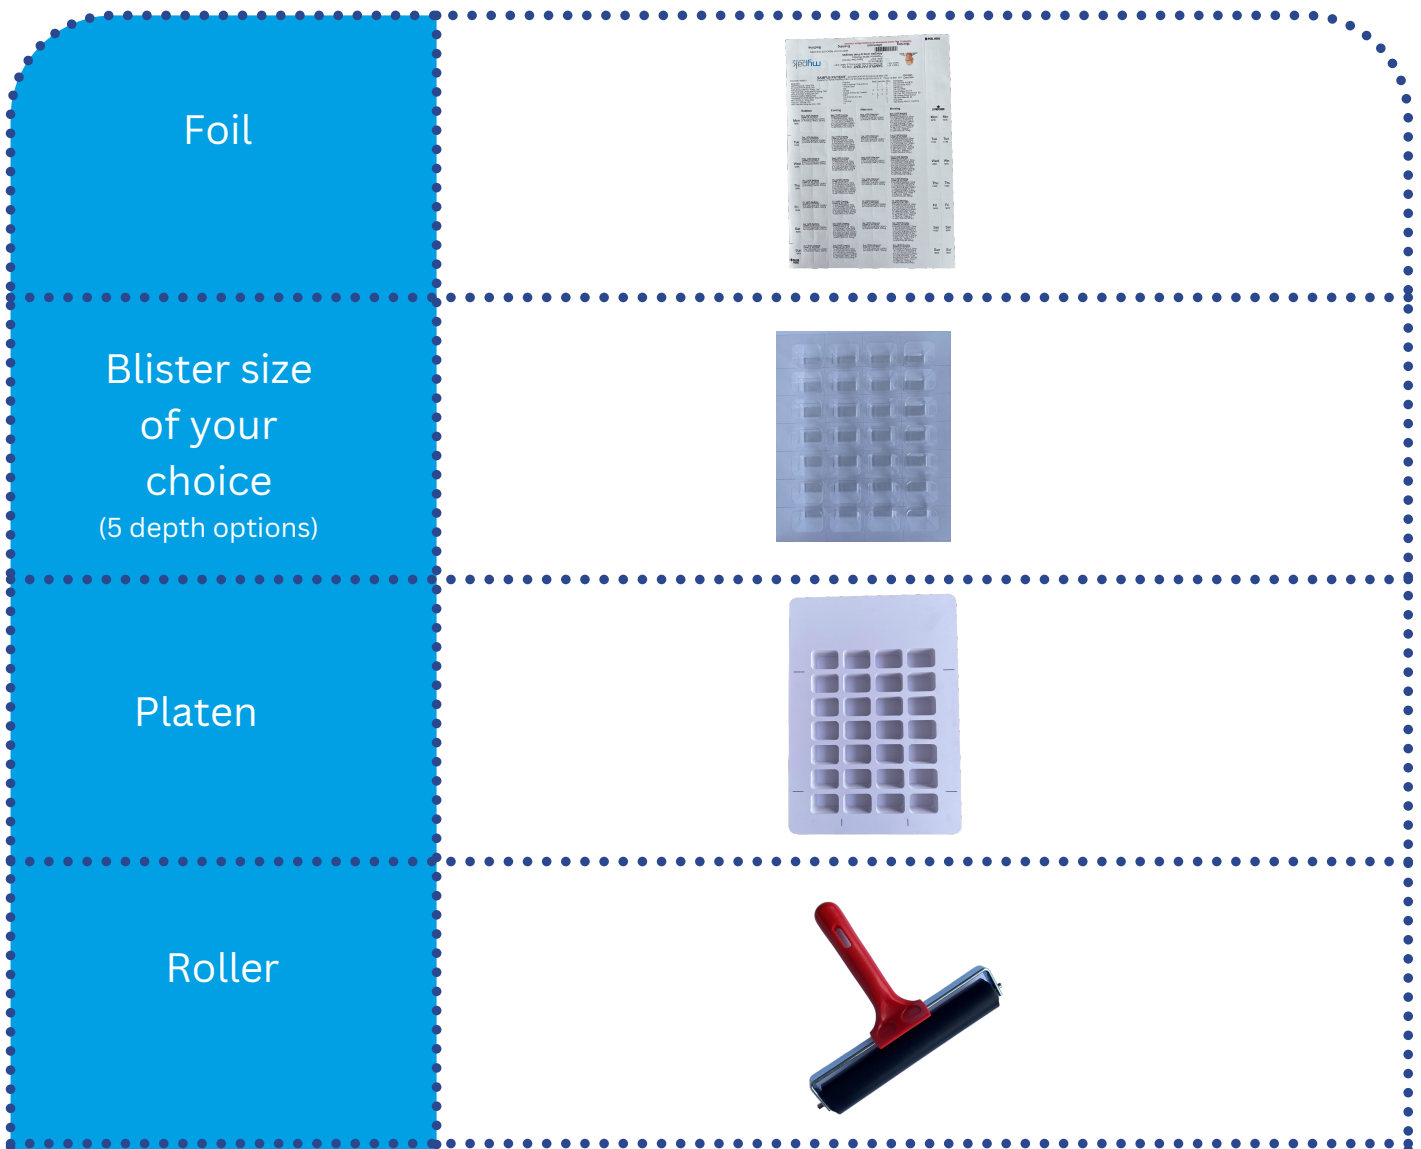


Step 1

Print the Foil from the myPak Software

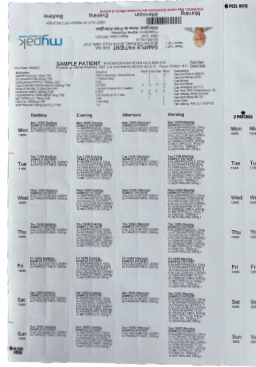

Step 2

Insert the perforated blister size of your choice into the platen.

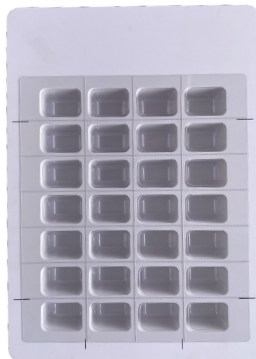


Step 3

Pack medication according to the patient profile displayed on the Foil or from the guided fill screen via the myPak software.




Step 4

Once all the medication has been packed, peel back the label at an angle from the “← PEEL HERE” corner. Leave the blue films intact as depicted below.

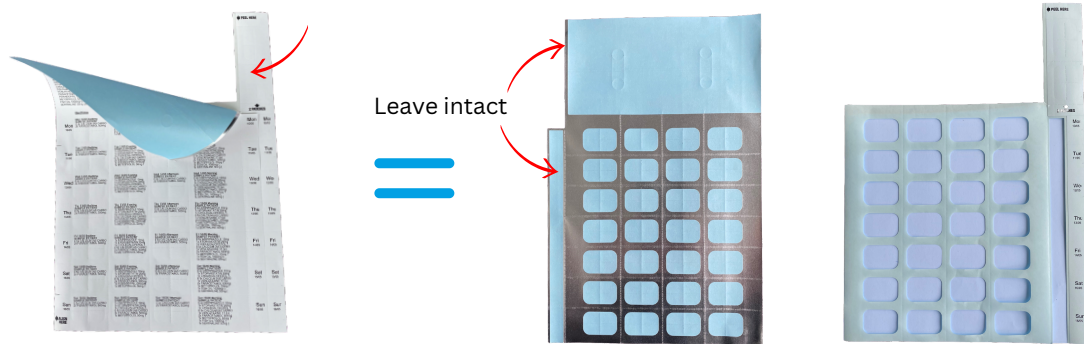

Step 5

Align the small black lines on sticky foil label with the black lines on the platen. Seal the pack and use the roller to ensure best adhesion of the pack.

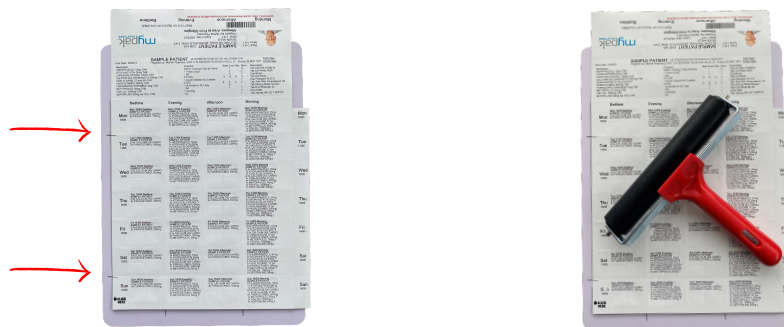

Step 6

Remove the blue film as shown below and fold at the perforated edges to create the header and side labels.



Step 7

Apply remaining label on the right hand side of the pack (optional)



Completed Pack

